


Exterior Mirrors

Driver's side:

The exterior mirror (2) can be adjusted from inside the vehicle by moving adjusting lever (1) in the desired direction.

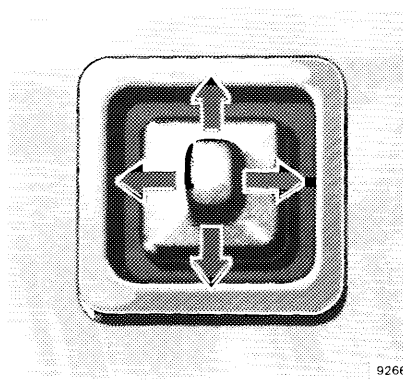


Passenger side:

Turn key in steering lock to position "1" or "2". The exterior mirror can be adjusted by means of the switch.

Note:

If the mirror housing has been forcibly removed from its normal position, it must be repositioned by applying firm pressure.

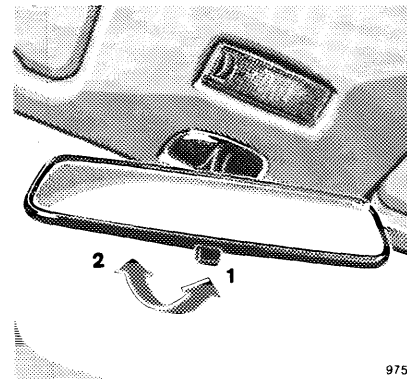

Inside Rear View Mirror

The mirror can be tilted to the anti-glare night position by means of the lever at its lower edge.

- 1 = Normal position
- 2 = Anti-glare night position.